
## KARTNERS


## **HAMBURG COLLECTION**


## **SINGLE SDH KNOB**

4407501

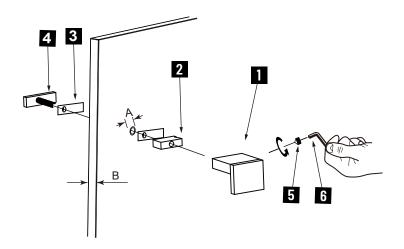


- 1.Knob x 1
- 2. Fixing Bracket x 1
- 3.Clear Gasket x 2
- 4.End Cap x 1
- 5.Set Screw M5 x 1
- 6.Allen Key 2.5mm x 1

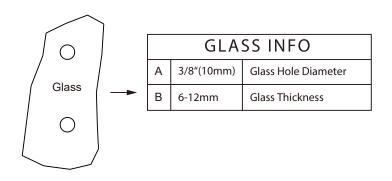


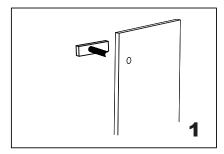


Install the end cap (bolt) through the glass hole, make sure the rubber gaskets are between end cap&glass.

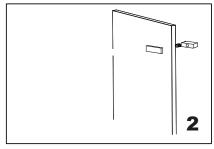

Add fixing bracket into the bolt, and tighten it with a small nut.

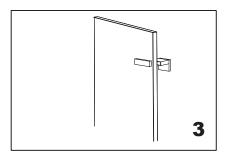

Add the knob on the fixing bracket.

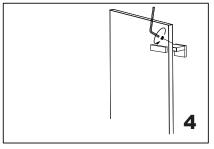

Fix the set screw on the knob, tighten it to avoid loose from fixing brackets.