


# KALLISTA®

## Multi-function Showerhead with Arm

### INSTALLATION INSTRUCTIONS

---

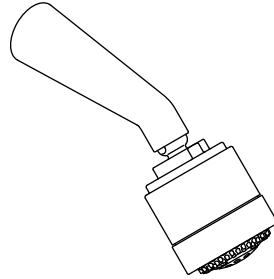

P24840

## INSTALLATION INSTRUCTIONS


## THANK YOU FOR CHOOSING KALLISTA

We appreciate your commitment to KALLISTA quality products. Please take a moment to review this manual before you install your KALLISTA product. If you encounter any installation or performance problems, please do not hesitate to contact us at the phone number listed at the bottom of the page.

## BEFORE YOU BEGIN

- Prior to installation, unpack the new showerhead and inspect it for damage. Return the showerhead to its protective carton until you are ready to install it.
- Observe all local plumbing and building codes.
- Shut off the water supply.
- The finished wall or bath/shower unit must be installed before installing this trim.
- KALLISTA reserves the right to make revisions in the design of products without notice, as specified in the Price Book.


## TOOLS AND MATERIALS

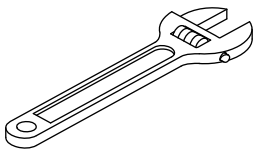

Adjustable  
Wrench




9 mm Hex  
Wrench

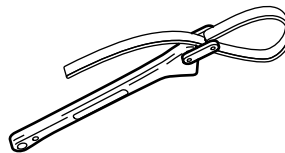

Strap  
Wrench




Thread  
Sealant



Plumbers  
Putty

## INSTALLATION INSTRUCTIONS


## INSTALL THE SHOWER ARM

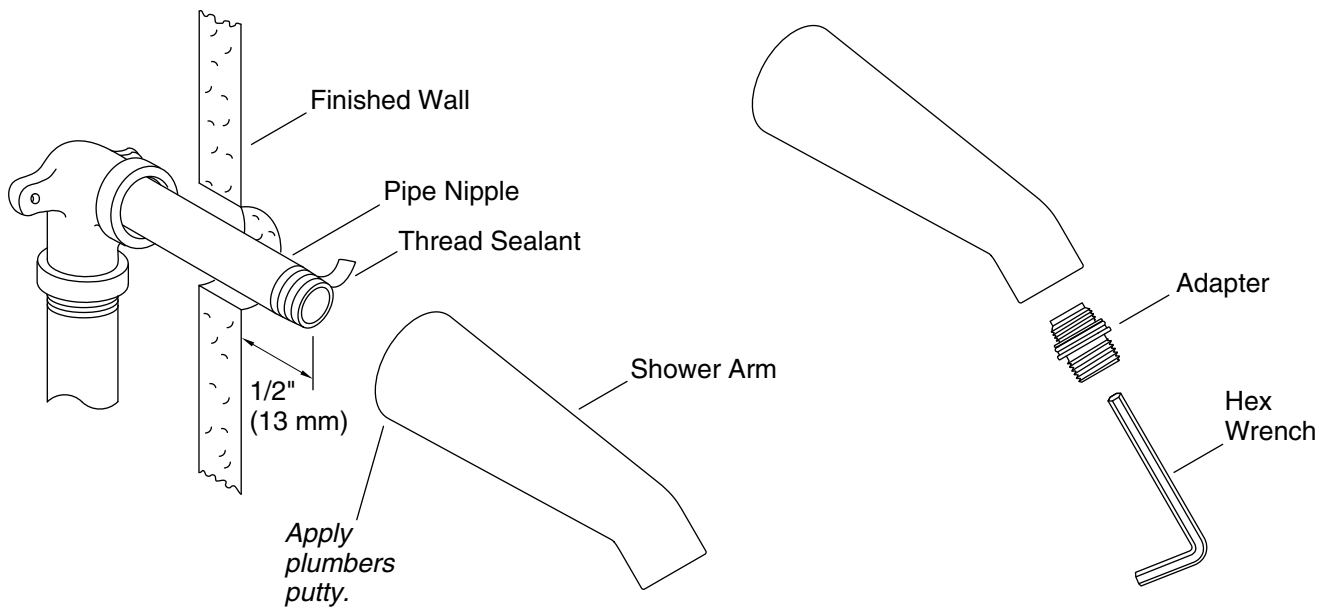

- Install a male 1/2" NPT pipe to extend 1/2" (13 mm) beyond the finished wall.
- Apply thread sealant tape to the exposed threads of the pipe nipple.
- Apply a bead of plumbers putty or other sealant to the back of the shower arm according to the putty manufacturer's instructions.
- Thread the shower arm onto the pipe nipple.
- Use a clean strap wrench to securely tighten the shower arm.
- Turn on the water supply.
- Run hot and cold water through the shower arm to flush out dirt and debris.
- Check for leaks. Repair as necessary.
- Remove any excess plumbers putty.
- Unthread the shower arm adapter from the shower arm using a 9 mm hex wrench.

## INSTALLATION INSTRUCTIONS

## COMPLETE THE INSTALLATION

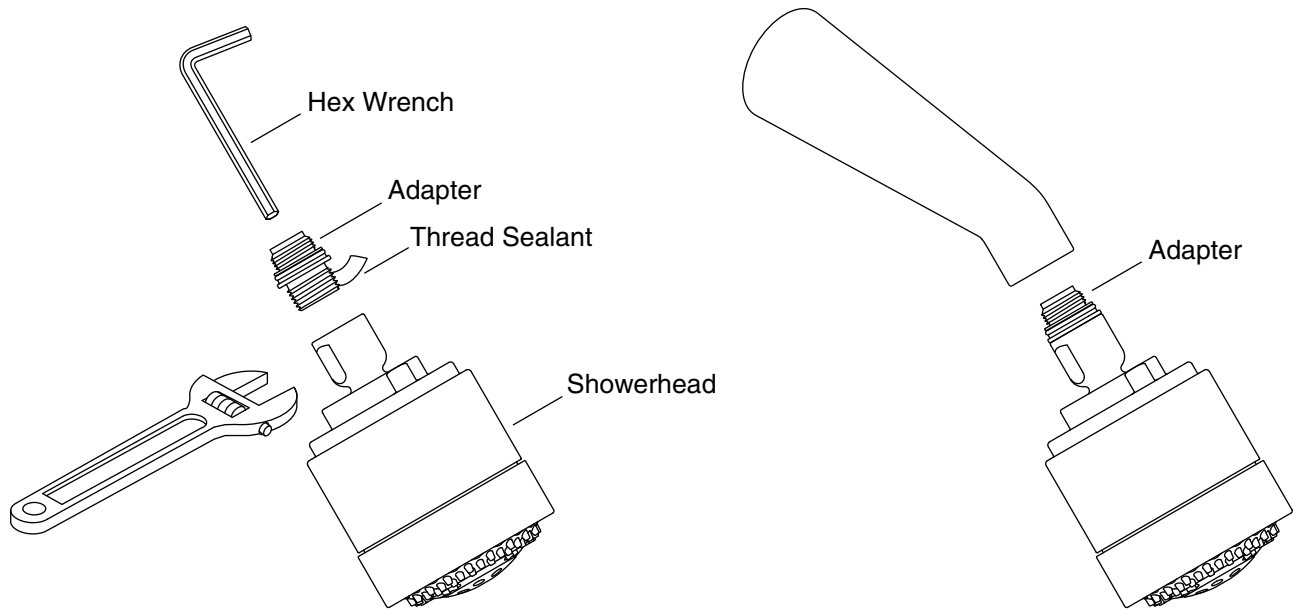

- Apply thread sealant to the shower arm adapter.
- Thread the adapter tightly into the showerhead while securing the ball joint with a clean adjustable wrench. Be careful not to scratch the finish with the wrench.
- Thread the showerhead tightly into the shower arm.
- Check for proper operation.