

MODEL: 610028 617223
611027 618125
616025 618218
617026 617124


INSTALLATION SHEET

Accessories

Step 1 : Have the door of your medicine cabinet open. Carefully drill four holes near the four corners of your medicine cabinet

See Figure 1.

Figure 1.

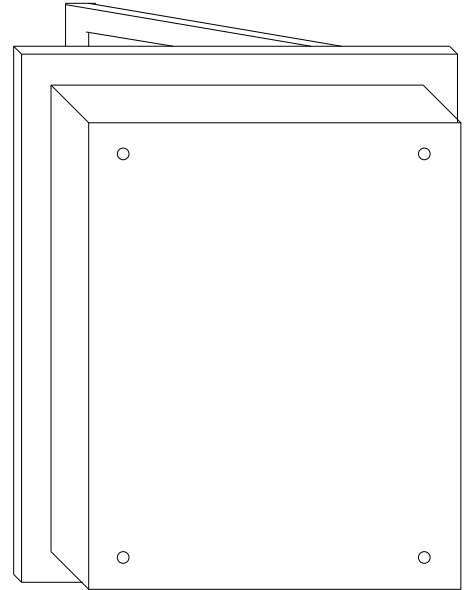

Step 2 : With a level, position your medicine cabinet to your desired wall location. Align and drill holes into the wall that match the holes you just drilled inside your medicine cabinet. Secure your medicine cabinet using four Hollow Wall Anchors.

See Figure 2.

Figure 2.

